



V2GO TECHNOLOGY CORP.

Tel: 626-582-8098, 1-877-5668246, Fax: 626-582-8908 9528 E. Rush St., Unit I, South El Monte, CA 91733

Troubleshooting for REC-ii Digital Recorder

1. **Problem:** Red and/or green LEDs do not illuminate.
Solution: 1. Batteries must be replaced or are installed correctly.
2. Turn on the power switch.

2. **Problem:** Green and red LEDs flash in unison.
Solution: Battery is low and needs to be replaced.

3. **Problem:** All LEDs operate correctly but no sound is heard from earphones.
Solution: Ensure earphone plug is inserted firmly into the HEADPHONE receptacle.

4. **Problem:** All LEDs operate correctly but the REC-ii will not record.
Solution: 1. Ensure RCA X 1/8" stereo cable's 1/8" end is inserted firmly into the LINE-IN receptacle
2. Ensure that the device you have connected the REC-ii to is operating properly

5. **Problem:** Earphones keep falling out of my ears.
Solution: While the REC-ii comes with quality earphones, some users prefer over-the-head headphones. Most quality headphones from Maxell, Sony, Koss, Bose and other manufacturers are fully compatible with your REC-ii Recorder.